

Fiber Collimators Series 60FC

This document provides assistance in installing the fiber collimators series 60FC. It describes how a fiber cable is attached and how the collimation setting is adjusted.

1. Before You Start

The fiber collimator is shipped with a protection cap for the fiber receptacle and with a front cap.



Notice: Please remove all the protection caps first and do not use them as beam dumps (risk of photo contamination).

There is a two-part protection cap on the receptacle. Please perform the following steps in order to remove this cap:



Figure 1:

First, remove the threaded cap from the fiber receptacle of the fiber collimator.



Figure 2:

Then, slightly loosen the small pin screw. Use the screwdriver 9D-12. Make sure to not loosen it too far, as it is small and easily lost.



Figure 3:

Now, pull out the plug.

Now make sure that the connector of the fiber you want to attach matches the receptacle type of the fiber collimator:

- Use fibers with FC-APC (8°-polish) connectors for fiber collimators with an inclined coupling axis (60FC-4).
- Use fibers with FC-PC (0°-polish) connectors for fiber collimators with a coaxial axis (60FC-0).

The fiber collimators are compatible to all fiber connectors type FC, including fiber connectors with end caps.

**Notice:**

- Do not touch either the optical surface of the lens or the fiber end-face.
- If the coupler is not in use, reattach both rear and front protection caps.

**Caution!****Refer to the laser instruction manual for all instructions regarding laser safety!**

- Do not stare directly into the laser beam (which can cause permanent damage to the eyes).
- Do not stare at the reflected beam from reflective objects.
- Do not point the laser beam to other individuals.

2. Attaching a Fiber Cable to the Fiber Collimator

For attaching a fiber cable to the fiber collimator perform the following steps:

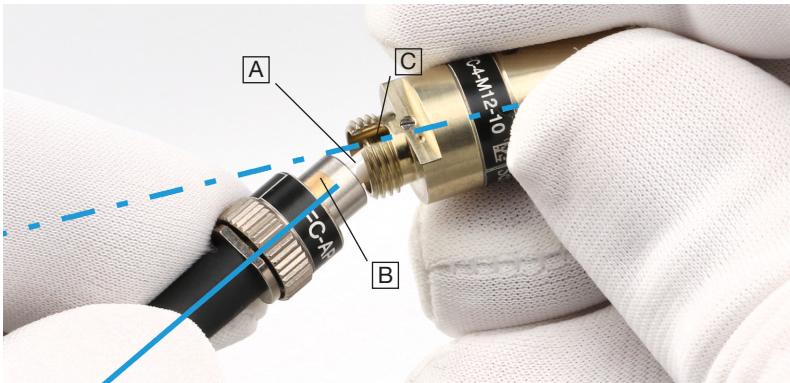


Figure 4:

To prevent damage to the sensitive fiber end-face, always insert the fiber connector's ferrule **A** at an angle, with the connector key **B** properly aligned to the receptacle notch **C**.

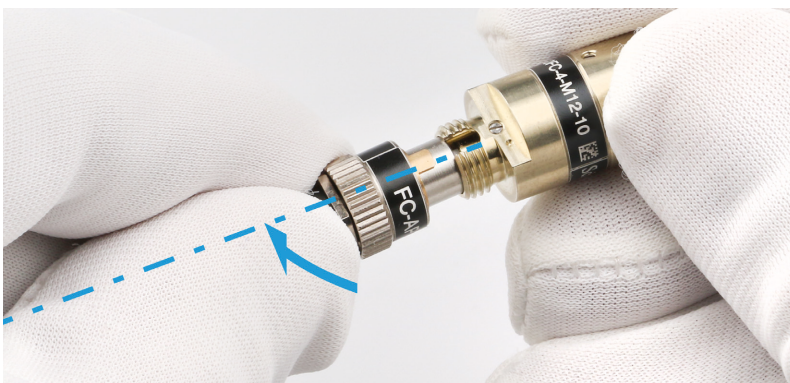


Figure 5:

When the ferrule tip is safely located in the inner cylinder of the receptacle, align the connector to the receptacle axis and carefully introduce the connector into the fiber collimator.



Figure 6:

Then, orient the connector key in a way that it is pressed gently onto the right-hand side of the receptacle notch.



Figure 7:

Gently screw on the connector cap nut onto the receptacle until it is finger-tight.

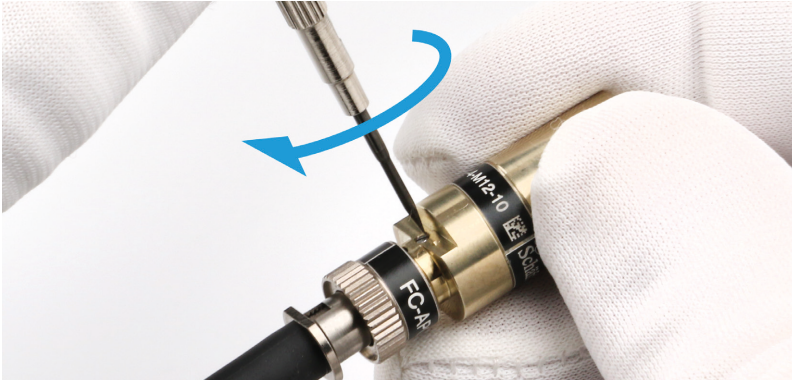


Figure 8:

Finally, gently tighten the fiber grub screw to reduce the free play of the ferrule in the receptacle.

The free play in between the connector ferrule and receptacle is only a few microns, but necessary for inserting the ferrule without force.

The tightened grub screw and the right-hand orientation rule for the connector, ensure a high reproducibility in mode field position and angle, which is especially important for attaching and reattaching polarization-maintaining fibers reproducibly.

3. Adjusting the Collimation Setting

Collimation adjustment (adjustment of the collimating lens in z-direction) is a demanding task and should be performed preferably using a collimating telescope.



Notice: The fiber collimator is shipped pre-adjusted for the labeled wavelength and, often, it is not necessary for the customer to readjust the lens position. This is why you can skip this step in most cases.

When adjusting the focus setting without a collimating telescope, the criterion for a proper collimation is different for single-mode or polarization-maintaining fibers compared to multimode fibers.

The fiber collimators series 60FC with a receptacle of type FC PC or FC APC are typically used for single-mode or polarization-maintaining fibers. Therefore, only the adjustment of single-mode or polarization-maintaining fibers is described in this document.



Notice: For the adjustment of the collimation setting in case of multimode fiber, please refer to www.sukhamburg.com/support/technotes/fiberoptics/coupling/collimatingsm/practicalcollimation.html

3.1 Focus setting for single-mode or polarization-maintaining fiber cables

For rating the collimation setting of the fiber collimator, couple a radiation source of appropriate wavelength into the fiber connected to the fiber collimator. Direct the beam to a target about half a Rayleigh length z_R away:

$$\frac{z_R}{2} = \frac{\pi \cdot \varnothing_{\text{beam}}^2}{\lambda \cdot 8}$$

Here λ is the optical wavelength and $\varnothing_{\text{beam}}$ the collimated beam diameter (1/e² level).

When correctly collimated, the laser spot diameter on a target about $z_R/2$ away must have approximately the same diameter such as the beam directly behind the fiber collimator. Additionally, make sure that there is no focused spot between the fiber collimator and the target at $z_R/2$.

3.2 Changing the focus setting

For adjusting the collimation setting of the fiber collimator, couple a radiation source of appropriate wavelength into the fiber connected to the fiber collimator.



Caution! Refer to the laser instruction manual for all instructions regarding laser safety!

- Do not stare directly into the laser beam (which can cause permanent damage to the eyes).
- Do not stare at the reflected beam from reflective objects.
- Do not point the laser beam to other individuals.

The collimation setting is adjusted by means of an eccentric key. The eccentric key type 60EX-4 is used for fiber collimators with focal lengths ≤ 11 mm. For fiber collimators with focal lengths ≥ 12 mm please use the eccentric key type 60EX-5.

For adjusting the collimation setting perform the following steps:

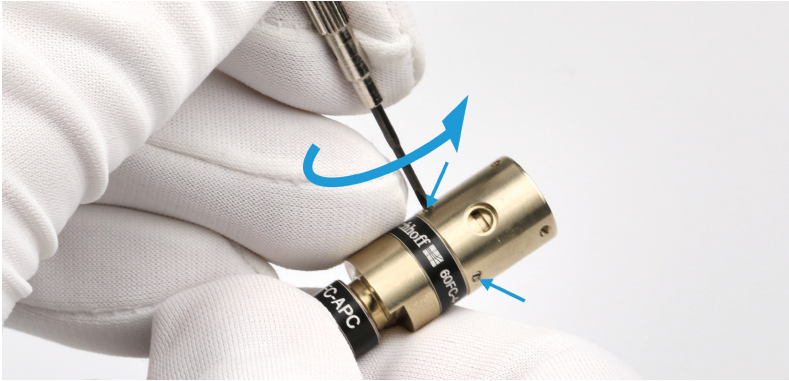


Figure 9:

Loosen the two grub screws fixing the lens position by means of a screwdriver type 9D-12.



Figure 10:

Insert the eccentric key into the large hole. Now, adjust for the focus setting by rotating the eccentric key. Adjust the collimation by minimizing the size of the laser spot on the target about half the Rayleigh length z_R away.



Figure 11:

Finally, fix the two grub screws in order to lock the collimation setting.

4. Adjustment tools

For adjusting the fiber collimators series 60FC you need the following tools:



Figure 12:

Screw driver type 9D-12 and eccentric key type 60EX-4 or type 60EX-5.



Figure 13:

Eccentric key type 60EX-4 or type 60EX-5.

5. Accessories



Figure 14:

Adapter ring type 12C-AM25 with an outer diameter 25 mm for placing the fiber collimator into a standard mirror mount.

Copyright

- © Unless expressly authorized, forwarding and duplicating of the document and the utilization and communication of its contents are not permitted. Violations will entail an obligation to pay compensation.
- All rights in the event of granting of patents or registration of a utility model.
- Schäfter+Kirchhoff GmbH and the Schäfter+Kirchhoff logo are registered trademarks.
- The specifications are subject to change; the manual is not covered by an update service.
- The system shown on the photos and drawings of this manual may differ in detail from the system delivered.

Date of issue: 06.03.2023

Schäfter+Kirchhoff GmbH
Kieler Straße 212, 22525 Hamburg, Germany
Phone: +49 40 85 39 97-0
Fax: +49 40 85 39 97-79
Email: info@sukhamburg.de
Web: <https://www.sukhamburg.com>